

zenne

360° Oscillation Standing Fan



ZF-SF1611SL-W
User Manual

Thank you for your support on Zenne product. Please read this manual carefully before using the product and follow the safety instruction while operating the product. Keep the manual in a safe place for your future reference.

CONTENTS

1. SAFETY GUIDELINES.....	4~6
2. FEATURES	7
3. PART FIGURE.....	8~9
4. INSTALLATION&OPERATION INSTRUCTION.....	10~13
5. CLEAN AND MAINTAIN.....	13
6. MAINTAIN GUIDENCE	14
7. SPECIFICATION	14
8. WARRANTY.....	14

I . SAFETY GUIDELINES


- 1. This appliance is suitable for children 8 and older and those with reduced abilities if supervised or instructed on safe use and potential hazards.
- 2. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 4. Children should be supervised to ensure that they do not play with the appliance.

Read the instructions carefully, as they provide important safety information for use. If you see the familiar icon below, refer to the product manual.

● **ICON**


 Warning	Something that maybe result in severe damage to the units or your life.
 Forbidden	Some actions that must be absolutely prohibited.
 Must Obey	The content or actions that must execute absolutely as it said.

- If the appliance fails to operate, all repairs must be carried out by a service center.
- Disassembly, modify will affect product safety.

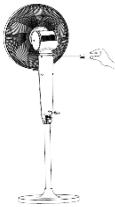

No Disassembly







 
- Do not touch the power cord with wet hands.
- Risk of electric shock.



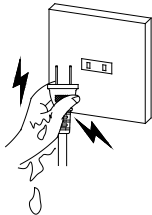


Be care of electricity



Do not touch

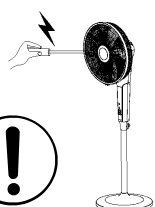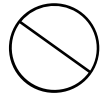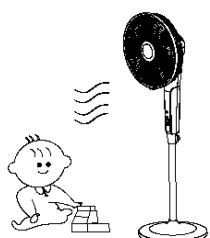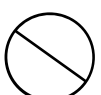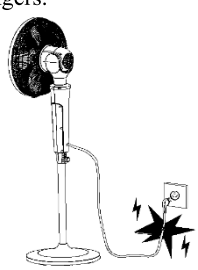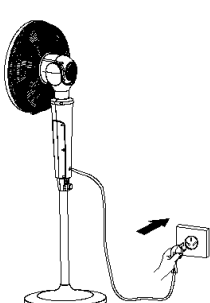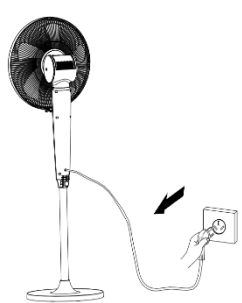● Do not insert sticks, metal sticks and other objects into the inlet and outlet ■ May cause leakage, short circuits or damage to the product.    Be care of electricity Must Obey	● Do not spray pesticides and flammable sprays around the product. ■ May cause product damage.   General Forbidden
● Avoid directing the product's outlet toward young children for prolonged periods. ■ Can cause illness or affect the health of children.   General Forbidden	● When unplugging the power cord, pull the plug, not the cord ■ Will cause the power cord is damaged, leakage and other dangers.   Be care of electricity  General Forbidden
● Make sure the power cord is free of foreign objects and the plug is fully inserted. ■ Can cause dangerous leakage.   Be care of electricity  Must Obey	● Exception Handling ■ If the product emits an unpleasant smell or abnormal sounds during use, stop using it immediately and disconnect the power.   Must Obey

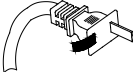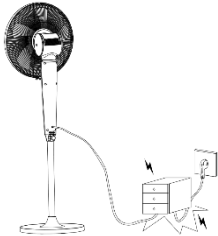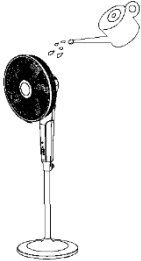
- Do not use the appliance if the power cord is exposed or damaged. - This can result in a short circuit and potentially cause a fire or electrical leakage. - If the power cord is damaged, it must be replaced by the manufacturer, a professional service center, or qualified personnel to avoid danger.   Be care of electricity Must Obey	- Do not fold or place heavy objects on the power cord. - Can cause dangerous leakage.  Be care of electricity Must Obey 
- Do not rinse the appliance body with water. - May cause leakage, short circuits, or damage to the product.  Be care of electricity Must Obey 	- Do not use the machine near a bathtub, sprinkler, or pool. - Never use the machine directly below a power outlet. - Keep the unit away from walls, curtains, and other combustible materials to prevent fire hazards.  General Forbidden
- If leaving for a long time or not using the machine, turn it off and unplug the power cord. - Avoid using the machine when children, animals, or individuals with limited mobility and no supervision are present.  Must Obey	- The power outlet should meet safety requirements, with a capacity of at least 10A/220V. - Ensure that the supply voltage matches the voltage specified on the nameplate. - Confirm the voltage before using the appliance in a new location.  Must Obey

II. FEATURES

1. Timing Options: 1H, 2H, 4H, 8H
2. Infrared Remote Control
3. Three Wind Speeds: High (H), Medium (M), Low (L)
4. Three Wind Modes: Normal, Natural, Sleeping
5. LED & Digital Display
6. Oscillation Angles: 60°, 90°, 180°, 360° (Selectable)
7. Adjust Oscillation Angles: Use LEFT/RIGHT Controls
8. Manual Vertical Oscillation:
-8°, 0°, 10°, 20°, 30°, 40°, 50°, 60°, 70°, 80°, 90°
9. Power & Button Sound Alerts:
Power On: "Bi Bi"
Button Press: "Bi"
Power Off: "Bi-"

III. PART FIGURE

● Structure

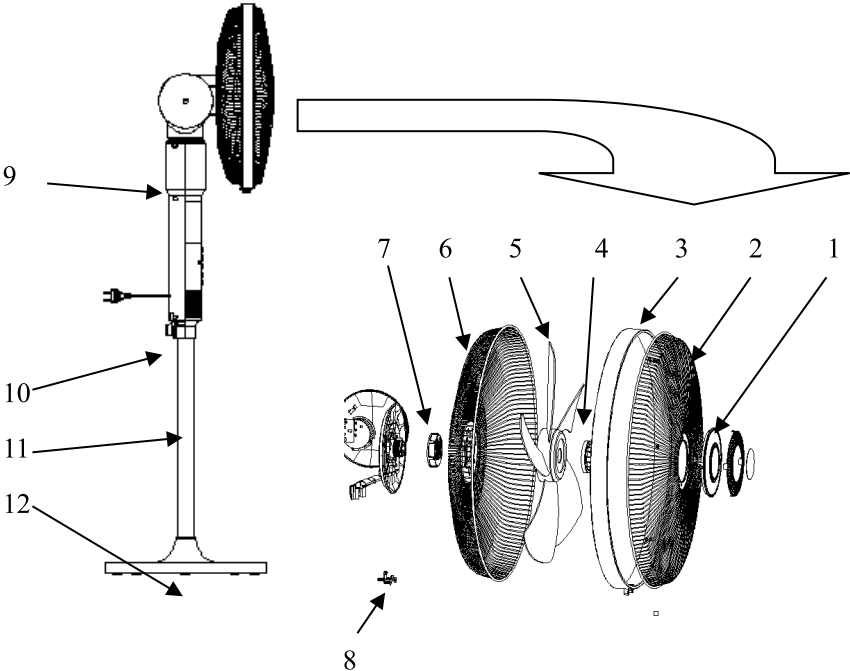


- | | | | |
|---------------------|----------------------|------------------|-----------------------|
| 1. Decoration Cover | 2. Front Grill | 3. Fan Net Ring | 4. Blade Nut |
| 5. Fan Blade | 6. Back Grill | 7. Blade Nut | 8. Fan Net Ring Block |
| 9. Fan Body | 10. Adjustment Screw | 11. Stand Column | 12. Pipe Screw. |

Attachment




Remote Control


● Display panel

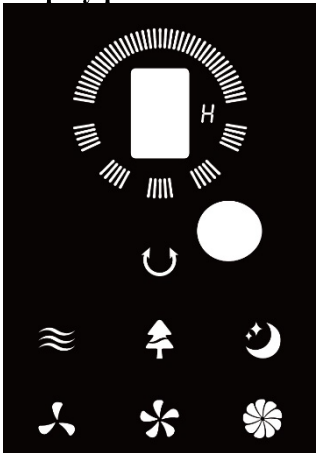

Remote control panel

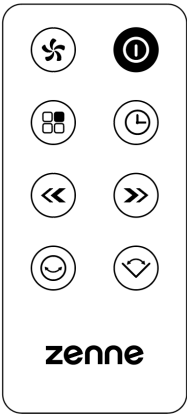

● Control panel

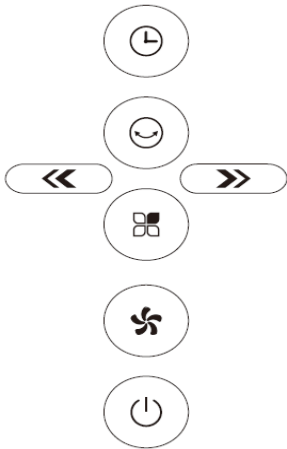


IV. INSTALLATION&OPERATING INSTRUCTION


● Installation

1. Take out all parts and check if the manual, remote control, and spare parts are included.
2. Insert the column through the base hole and secure it tightly with a screw. (Figure 1)
3. Place the fan body onto the column and fix it with a nut. (Figure 2)
4. Attach the rear grill to the motor's rear cover, align it with the holes, and secure it with the grill nut. (Figure 3)
5. Mount the fan blade onto the motor axis and tighten it with the blade screw. (Figure 4)
6. Attach the front grill and grill ring to the rear grill, then secure the grill ring using the bottom lock. (Figure 5)
7. Once assembled, plug in the power and operate the fan as instructed in the manual.


《Figure 1》

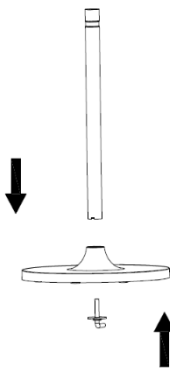


《Figure 2 》

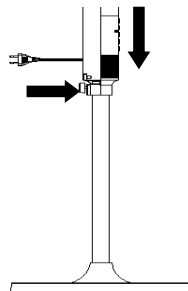


《Figure 3》

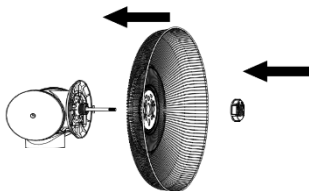

《Figure 4》

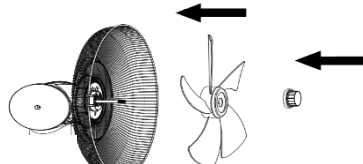

《Figure 5》

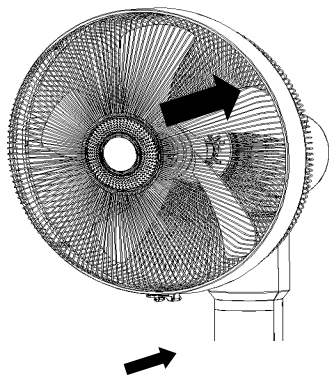

● OPERATION INSTRUCTION

All functions can be controlled by pressing the buttons on the control panel.

1. ON/ OFF

When first plugged in, the fan will emit a “Bi Bi” sound alert and enter standby mode, where only the “ON/OFF” button is functional.

2. SPEED

Press the “SPEED” button to adjust the wind speed in the sequence of L → M → H → L, with the LED light changing accordingly.

3. SWING

- a Manual Vertical Oscillation: Adjust manually to -8°, 0°, 10°, 20°, 30°, 40°, 50°, 60°, 70°, 80°, or 90° as needed.
- b Manual Horizontal Oscillation: Adjust freely by hand to any angle between 0° and 360°.
- c Automatic Horizontal Oscillation: Press the “SWING” button to cycle through oscillation settings in the sequence: 0° (stop) → 60° → 90° → 180° → 360° → 0° (stop)..., with the LED light changing accordingly.
- d Manual Swing Adjustment: Press and hold the button.  or  to move the fan head left or right. Release the button to stop the movement.

4. MODE

The fan starts in Normal Mode when turned on. Press the MODE button to cycle through: Normal → Nature → Sleeping → Normal..., with the display updating accordingly.

①. Normal Wind Mode


High Wind Speed: High -----

Medium Wind Speed: Medium ----

Low Wind Speed: Low ----

②. Natural wind

Natural Wind Mode includes three wind speeds: High, Medium, and Low, with airflow varying in a waveform pattern as shown in the following illustration.

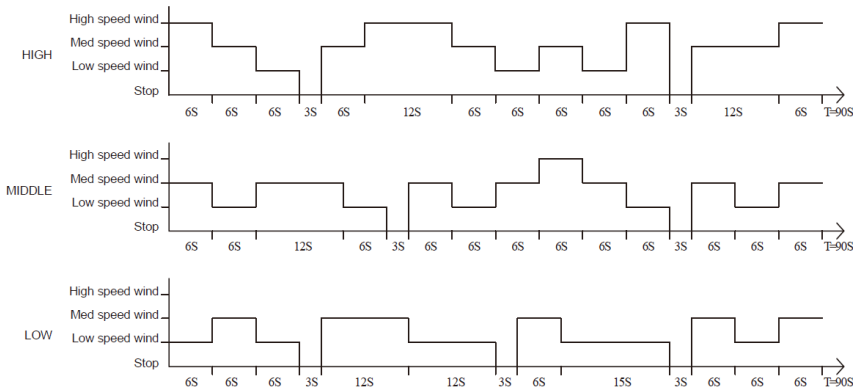

③. Sleeping wind:

High: 30 minutes of high natural wind → 30 minutes of medium natural wind → Then maintains low natural wind.

Medium: 30 minutes' medium natural wind—low natural wind (keeping)

Low Natural Wind Mode: The fan operates at a low natural wind speed.

In Natural and Sleeping modes, the speed LED display does not change according to wind speed.

5. TIMER

After turning on, the fan has no default timer setting, and the TIMER LED is off. Press the TIMER button to set the running time in the sequence: 1H → 2H → 4H → 8H → No Timer → 1H..., with the LED light changing accordingly.

Once set, the system begins the countdown and runs until the unit turns off.


6. FUNCTION CONSERVATION

In standby mode, the fan retains the wind speed and oscillation settings. However, timer and sleeping mode settings will not be saved.

7. The LED light dim to 33% if no buttons are pressed for 1 minute. Pressing any button will restore the original brightness.

● Usage for remote control:

1. Open the battery compartment on the back of the remote control and insert one CR2032 3V button battery.
2. Point the remote control towards the receiver; it may not work if obstructed. Handle the remote with care—avoid dropping it and store it in the handle.
3. Replace the battery only after turning off the power. Ensure correct positive (+) and negative (-) polarity when inserting the new battery.

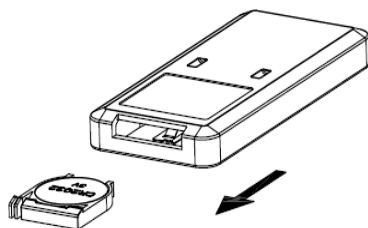

V. CLEAN & MAINTAIN

- If excessive dust or dirt accumulates on the back grill cover, it may reduce airflow performance. We recommend cleaning the fan at least once per month for optimal performance.
The fan should be cleaned at least every two months.
 1. Always unplug the fan before cleaning.
 2. Wipe all parts with a soft cloth. Do not use gasoline, thinner, benzene as cleaning agents.
- Unit surface cleaning
 1. Do not allow water or steam to drip onto the fan.
 2. Do not use corrosive detergents or solvent-based cleaners.
 3. Always unplug the fan before cleaning.

- Product storage:

1. Unplug the fan and pack it properly to prevent dust from entering if not in use for a long time.
2. Store the packed fan in a dry, well-ventilated place.

VI.MAINTAIN GUIDANCE

If the fan stops rotating or emits an abnormal smell, immediately turn off the power and contact the company service center for repair.

VII. SPECIFICATION

Model	ZF-SF1611SL-W
Rated voltage	220-240V~
Rated frequency	50Hz/60Hz
Rated power	65W
Noise	≤55 dB
Size	L453mm×W417mm×H1400mm
Weight	G.W.: 8.6Kg N.W.: 10.7 Kg
Environment	0~+40℃, relative humidity 90% (25℃)

Zenne Infinity Sdn. Bhd. (560198-X)
Lot 1863, Jalan Kolej, 43300 Seri Kembangan,
Selangor Darul Ehsan, Malaysia.
Tel: 03-8948 9088 Fax: 03-8948 9033
E-mail: zenne@zenne.com.my Website: www.zenne.com.my



WARRANTY REGISTRATION

(ONLY APPLICABLE FOR MALAYSIA)

WARRANTY CARD TO BE RETAINED BY CUSTOMER		(To be completed by dealer)
Customer's Name :		Dealer's name and address (Stamp)
Identity Card (IC) No :		
Address :		
Email Address :		
Tel No.	House :	
	Handphone :	
Product :		
Model :		
Serial No :		
Date of Purchase		Zenne Infinity Sdn. Bhd. (560198-X) Lot 1863, Jalan Kolej, 43300 Seri Kembangan, Selangor Darul Ehsan, Malaysia. Tel: 03-8948 9088 Fax: 03-8948 9033 E-mail: zenne@zenne.com.my Website: www.zenne.com.my
Date	Month	
	Year	



WARRANTY

TERMS AND CONDITIONS OF WARRANTY :

Thank you for purchasing a Zenne product. We warranty the provision of complimentary repairs for the fan for a period of 12 months from the date of purchase subject to the terms and conditions listed below.

1. This warranty only applies to those product(s) purchased directly, for domestic use in Malaysia, from Zenne authorised dealers as are particularised in Zenne's website: <https://www.zenne.my/>, where the product is supplied by Zenne Infinity Sdn. Bhd. Zenne does not provide standard warranty for any purchases made from any online platform and or unauthorised dealers.
2. This warranty covers manufacturing defects or failures to normal usage within the specified warranty period. Zenne Infinity Sdn. Bhd. or its authorised service dealers, will at its discretion either repair or replace the defective parts of the product without charge. All replacement parts under this warranty shall become the property of Zenne Infinity Sdn. Bhd.
3. This warranty card is not replaceable if it is lost or misplaced.
4. Faulty Fan can be sent to Zenne Infinity Sdn. Bhd. or its authorised dealers for repair. Consumers will be responsible for any transportation costs associated with any necessary repair services conducted at the consumer's premise.

The conditions not covered under this warranty, are:

- (a) Damage caused by household pests, fires, natural disasters, floods or pollution.
- (b) Any damage or defects incurred by unauthorised repair services, improper installation, unauthorised modification or alteration, misuse, negligence, riot and accident.
- (c) The product is damaged due to commercial usage (Warranty covers the products intended for personal household usage only).
- (d) Defects caused as a result of the consumer failing to follow instructions as stated in the user manual, etc. not performing proper cleaning and maintenance method.
- (e) Damage of external finishing (discolouring after prolong usage), accessories and removable and / or breakable items i.e. battery, knobs, enamelled / chromed stainless steel surface coating or finishing.

Note:

You are required to present the warranty card together with the purchase receipt or refer to its production date for your warranty service. Zenne Infinity Sdn Bhd or its authorized service dealer reserves the rights to decline any warranty claim should one or both documents fail to be presented. If you require any further assistance and/or information, please contact any of our authorized dealers.