

MODELS

KGS

- KGS101B
- KGS101C
- KGS201C
- KGS204A
- KGS205S
- KGS208C
- KGS208M
- KGS209VS
- KGS301A
- KGS301C
- SS309
- KGS401A
- KGS401C
- KGS501C
- KGS512S

KGT

- KGT301B
- KGT301B-SS
- KGT401B
- KGT501B

KTM

- KTM401S
- KTM402S
- KTM701S

KLS

- KLS206V
- KLS216V

KDi

- KDi106
- KDi106C
- KDi106D
- KDi201C
- KDi201D

KGC

- KGC11A
- KGC11C
- KGC12A
- KGC12C
- KGC16A
- KGC16C
- SS19


KTC

- KTC18S
- KTC28S

GST

- GST211

HIGH PRESSURE Regulator

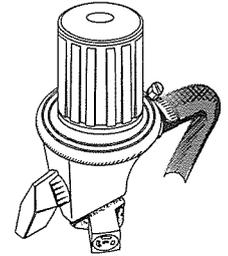

Outlet Pressure


EXCEEDED
3.3 kPa (33mbar)

Do not use a high pressure regulator. It may cause back-fires, internal fires and explosions.

LOW PRESSURE Regulator



High Pressure Relief Hole

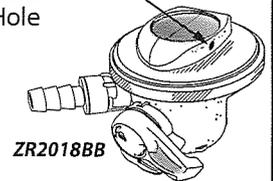

Outlet Pressure

2.0kPa ~ 3.3 kPa
(20mbar ~ 33mbar)

When using L.P Gas, the gas cylinder must be fixed with a reliable gas regulator.

Zenne Regulator : ZR2018BB & ZR2020BBP available in Malaysia.

The high pressure relief hole on the top of the gas regulators **must not** be clogged. Otherwise, there would be high pressure gas occurrence on the gas cooker. This may cause big flame or fire.

Please Read Before USE

ATTENTION

Thank you for buying a Zenne product.

- **Please read this instruction manual carefully before operating the gas cooker and kindly keep it for future reference.**
- Complete the warranty card with date of purchase, or dealer's receipt and other required information.
- If you find any abnormality on the gas cooker, please contact our dealer as soon as possible.
- All installation and repair services must be carried out by our installation and service team.

For Stainless Steel Top (with blue plastic protector sheet)



Blue Plastic Protector Sheet

Stainless Steel Top

A layer of grease exists in between the blue plastic protector sheet and the stainless steel top. It can be removed by wiping with a piece of wet cloth.

Please remove the plastic sheet before use.

CONTENTS

	PAGE
1. Safety Instructions	1
2. Danger	2
3. Warning	3 ~ 4
4. Caution	4
5. Gas Cooker Installation	4 ~ 5
6. Parts Identification	6
7. Placement of Parts	7
8. Operating The Ignition (Turn Type)	8
9. Cleaning & Maintenance	9 ~ 10
10. Troubleshooting	11
11. Product Specification	12 ~ 13
12. Inspection After Installation	13
13. Notes	14
14. Warranty	14 ~ 15

SAFETY INSTRUCTIONS

MUST STRICTLY COMPLY

The signs listed below should all be strictly followed to prevent the user and other people from any risk of injury and to prevent damage to belongings and properties. Each indicates the possibility of accidents occurring when the necessary precautions are ignored.



DANGER

This sign is marked on items that are **EXTREMELY LIKELY** to cause death or serious injury.



WARNING

This sign is marked on items that are **HIGHLY LIKELY** to cause death or serious injury.



CAUTION

This sign is marked on items that are **LIKELY** to cause serious injury and material damage.

The following are some of the symbols used throughout this manual.



Pay attention and handle the item with EXTRA care.



Be careful. Flammable item.



DO NOT DISMANTLE or repair by yourself.



Banned items or actions.



DO NOT TOUCH!




KEEP FLAMMABLE ITEMS AWAY.



DANGER


Take Caution When Gas Leak

STEP 1

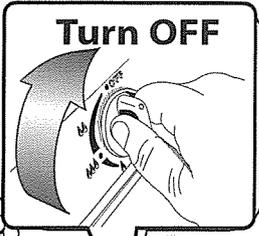


In the event of a gas leak, **turn off the gas cooker immediately.**



STEP 2

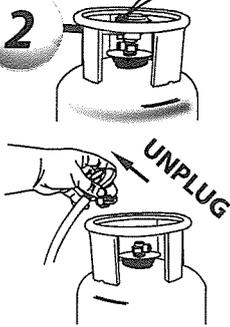


Turn off and **unplug** the regulator from the gas cylinder.

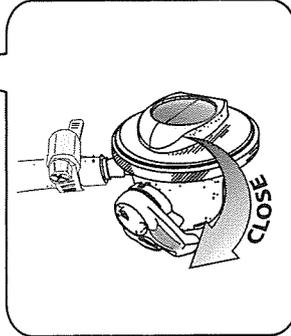

DO NOT ignite or switch on any electrical products if a gas leak has been detected.

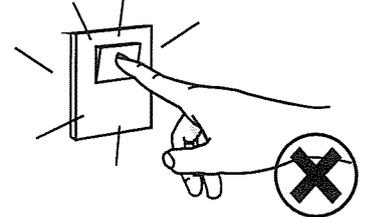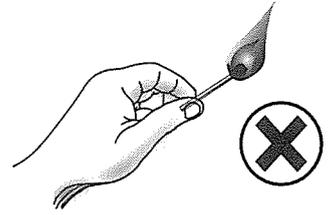

STEP 3

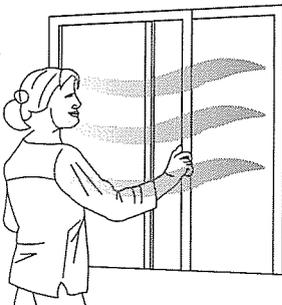

Open all windows and doors to ventilate the cooking area.


STEP 4




Contact and report the leakage to your authorised Zenne dealer.

Detecting A Gas Leak

Gas leaks can occur due to defects with the gas hose as shown below.

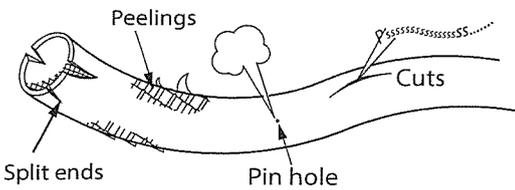


STEP 1

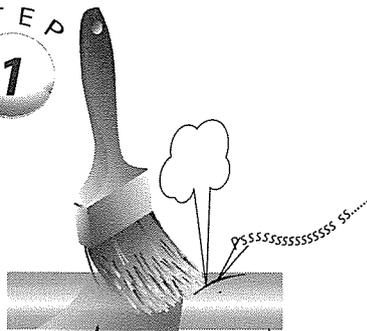

Soap solution

STEP 2

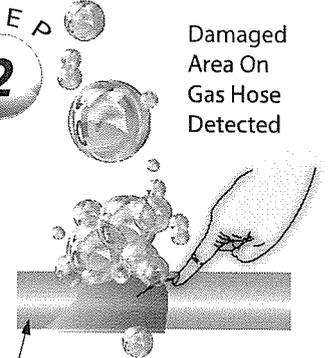


Ruptured gas hose

Damaged Area On Gas Hose Detected

To detect gas leak, apply soap solution onto the gas hose. If bubbles are seen appearing, this is a sign that it needs to be changed. Remember to check your gas hose regularly.

Warranty Validity & Original Parts

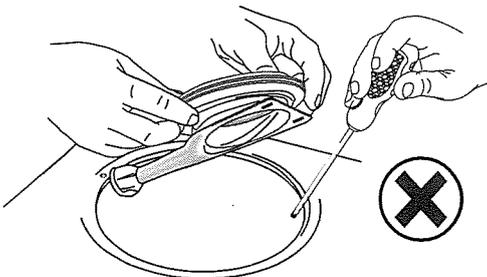



DO NOT dismantle or replace the original parts of the gas cooker with other accessories or additional gas fittings.

This may not only invalidate its warranty but can also cause **DANGER** to the user.



Safety

DO NOT leave the gas cooker unattended while in use.

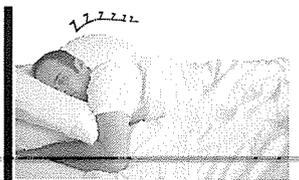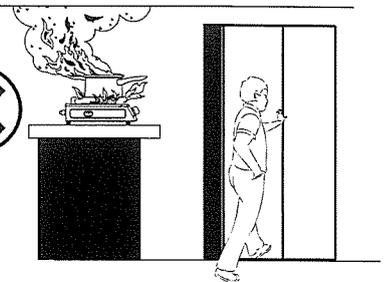




WARNING

■ Adult Supervision



DO NOT allow children to operate the gas cooker without adult supervision.
Take extra caution if there are children in the household who may wander in the cooking area and touch the gas cooker while it is still hot.


■ Control Flame Size

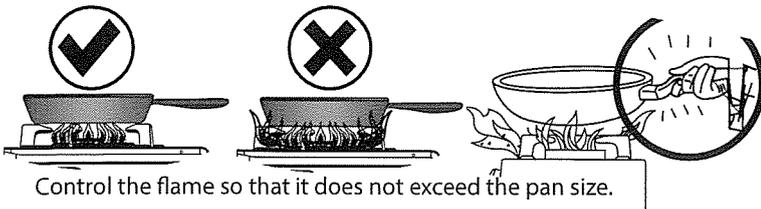

Control the flame so that it does not exceed the pan size.

Flame exceeding the pan size may cause high heat to the handle and this will cause burn, fire etc.


■ Flammable Items

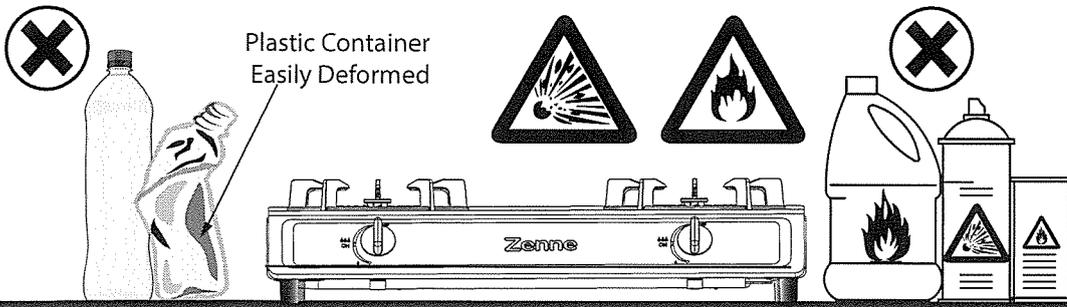

DO NOT place or use the gas cooker near flammable items or walls as fires or explosions may occur. These items include matches, gas canisters etc.

DO NOT place the gas cooker near plastic objects as it is highly likely that the heat generated by the gas cooker may cause these items to melt and deform.


■ Failure to Ignite During Inspection

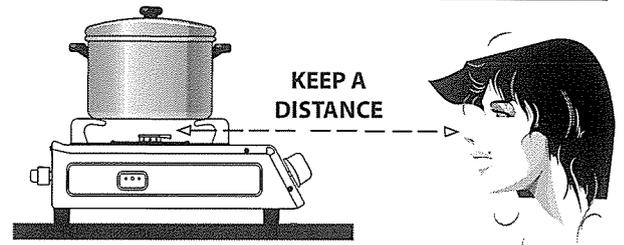


DO NOT place your face near the burner when igniting the gas cooker or while troubleshooting an ignition failure.

■ Glass Top (for GST211)

DO NOT place sharp or heavy tools on the glass top. It may cause cracks or scratches to the glass top.

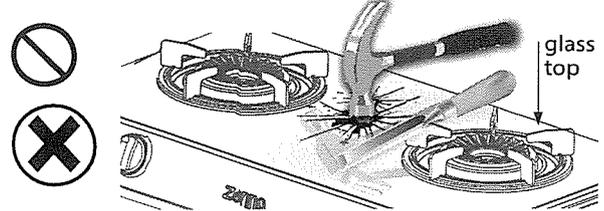


■ Good Ventilation

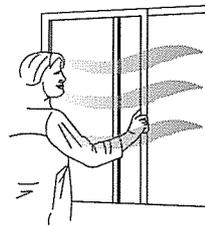

Open window and door or switch on range hood / ventilation fan to ventilate the cooking area.

■ Placement of Gas Cylinder

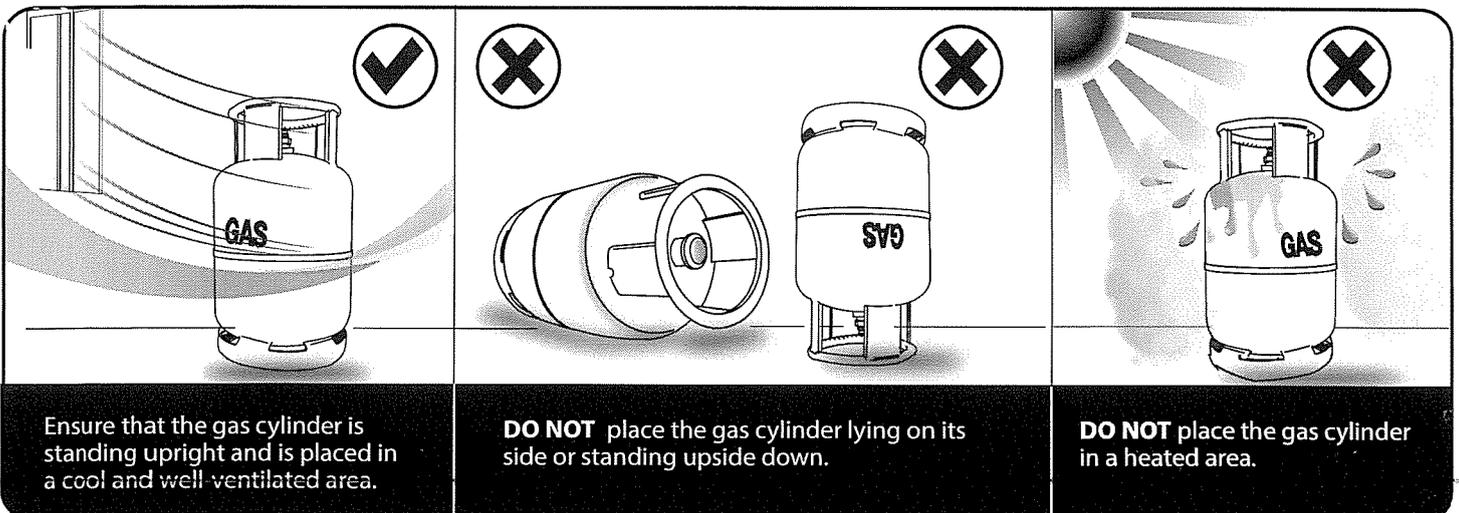

Ensure that the gas cylinder is standing upright and is placed in a cool and well ventilated area.


DO NOT place the gas cylinder lying on its side or standing upside down.

DO NOT place the gas cylinder in a heated area.




CAUTION

Gas Cooker Placement

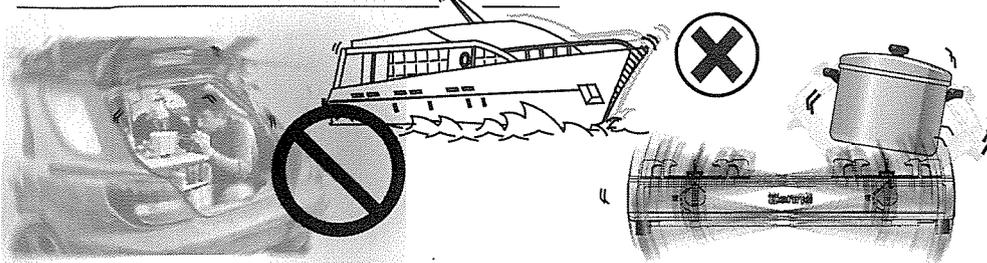


DO NOT install the gas cooker inside any moving vehicle i.e. boat, van etc. This may cause fire and other damages if used in an environment with constant and serious vibrations.

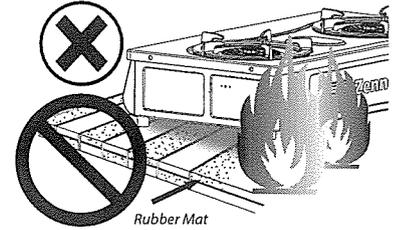


To prevent an accidental fire, **DO NOT** place the gas cooker on a rubber mat.

Hot Temperature

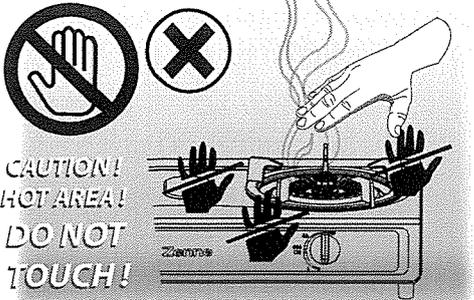


DO NOT touch the top plate, trivet etc. during or immediately after cooking.

Cooking Liquid Food

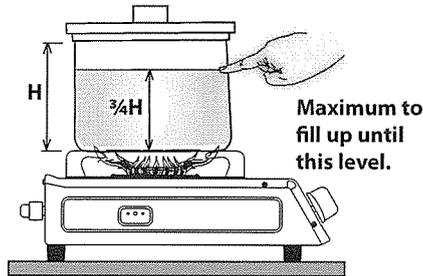


DO NOT fill the cooking utensil to the brim when preparing soups or stews. It may overflow and extinguish the flame. The gas would not cut off for gas cooker without flame failure safety sensor. Big flame or fire may happen.

Direct Grilling

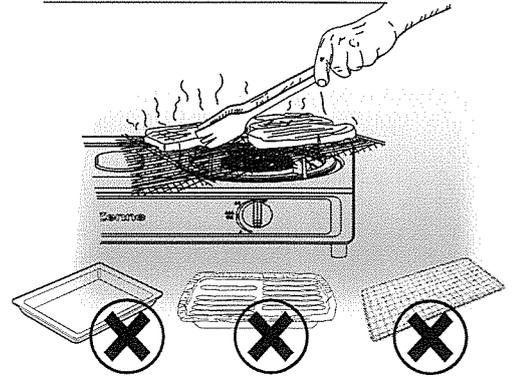


DO NOT grill food directly on the burner.

GAS COOKER INSTALLATION

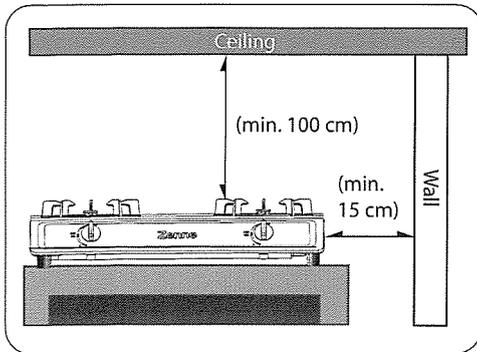

Front View




Place the gas cooker away from the wall and ceiling according to the minimum required distance shown in these diagrams.

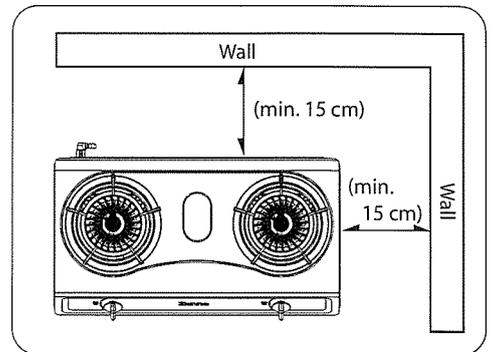

Top View

Gas Cooker Placement

Install the gas cooker on a **solid** and **level** surface.

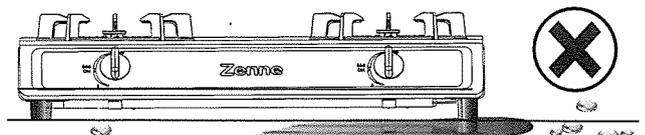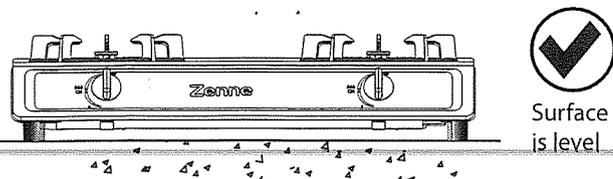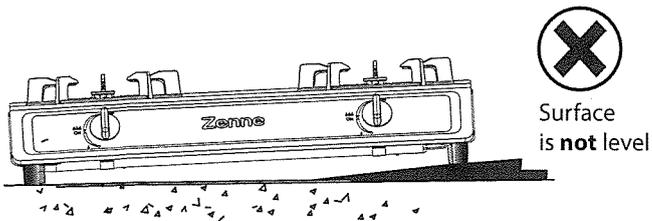


KEEP DRY! Install the gas cooker in a **dry** area. High humidity may shorten the product's lifespan.



GAS COOKER INSTALLATION

Gas Type

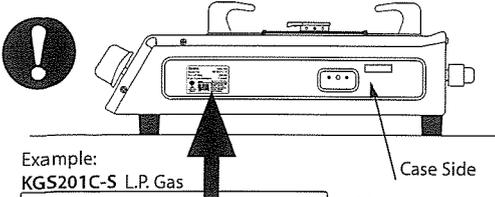


Example:
KGS201C-S L.P. Gas

Zenbe	Table Top
Model No. KGS201C-S	
For LP Gas	2.8kPa
Gas Consumption:	7.20kW
	19.05.000001
	030519
PART 2: 2002	
PC004178	
Zenbe Infinity Sdn. Bhd. Lot 1803, Jalan Kolej, 43300 Seri Kembangan, Selangor, Malaysia. Made in Malaysia	


Use correct gas type specified on the side label.
If the type of gas used is incorrect, it can cause improper combustion, carbon monoxide poisoning, fire, and other hazards.

Gas Hose Connection

Ensure that the gas hose is not in contact with any part of the gas cooker while cooking.

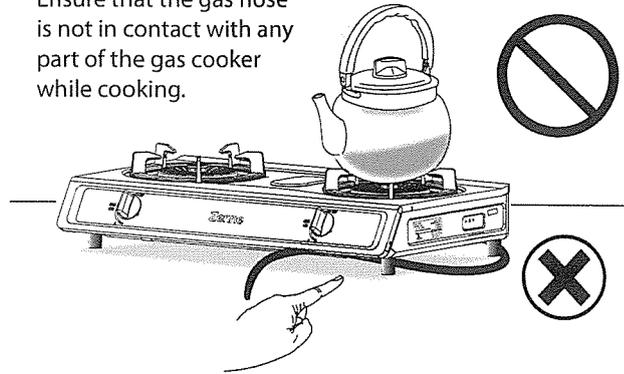

Gas Hose Installation

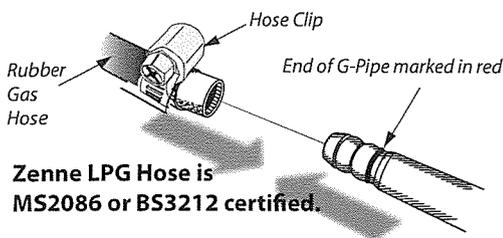


Zenbe LPG Hose is MS2086 or BS3212 certified.


Fit the certified rubber gas hose tightly over the end of the gas supply line and secure it with a hose clip. If the rubber gas hose is not secured tightly, it may cause a gas leak or fire.

Ensure that the gas hose is cut to the adequate length (less than 2 metres) and it is not bent.

Bending or stretching may break the gas hose and cause a gas leak.

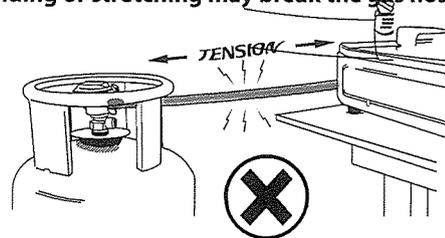

Gas hose is too short. The stress and tension caused by stretching may break the gas hose in the long term.

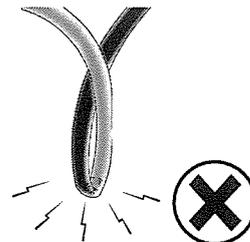

A sharp bend on the gas hose can affect gas flow. The affected section may crease, wrinkle or even puncture.

Replacement of Gas Cooker or Gas Regulator

- It is recommended for the gas hose to be replaced every three years. When replacing gas cooker / gas regulator, trim off gas hose 50mm from the connecting end of the new gas cooker / gas regulator (as shown in the diagram). This is to prevent any loose connections that may cause gas leak.

Perform leak test on the connections after changing the gas cooker or gas regulator.

Remove 50mm off at hose end.


Ensure that all connections are secured with a **hose clip**.

Gas Regulator Hose Clip


Gas Inlet of Gas Cooker Hose Clip

PLEASE PAY ATTENTION TO THE CONNECTIONS


PARTS IDENTIFICATION

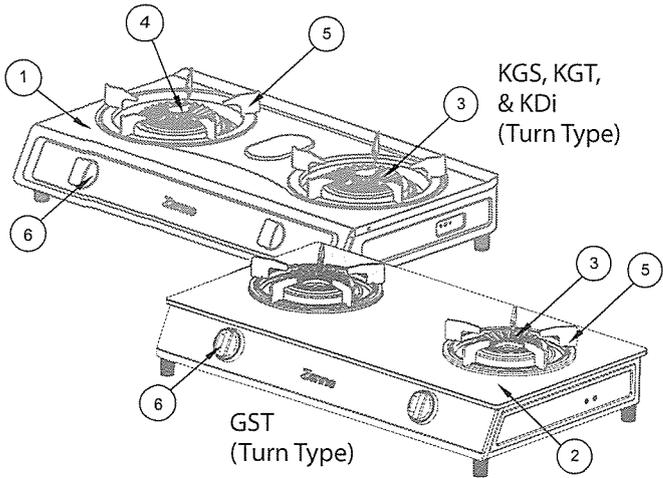


KGS, KGT, KBR, KDi & GST MODELS (TURN TYPE)		
Without Safety Sensor		With Safety Sensor
• KGS101B	• KGS101C	• KGS501C • KGS512-S • KGT501B
• KGS201C	• KGS204A • KGS205S	
• KGS208C	• KGS208M • KGS209VS	
• KGS301A	• KGS301C • SS309	
• KGS401A	• KGS401C	
• KGT301B	• KGT301B-SS	
• KGT401B		
• KDi106	• KDi106C • KDi201C	
• KDi106D	• KDi201D	
• GST211		

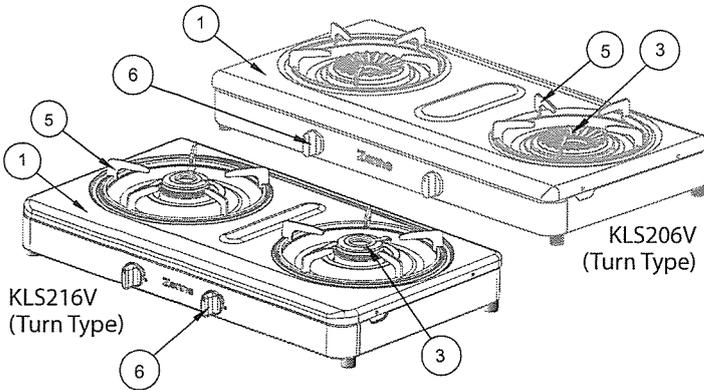

MODEL KLS (TURN TYPE)	
Without Safety Sensor	With Safety Sensor
• KLS206V • KLS216V	• Not Available

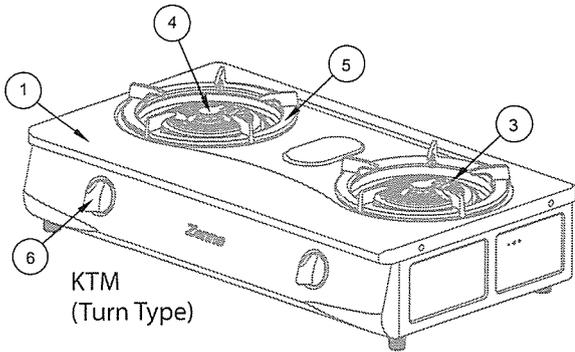

KTM MODELS (TURN TYPE)	
Without Safety Sensor	With Safety Sensor
• KTM401S • KTM701S	• KTM402S
	• Not Available

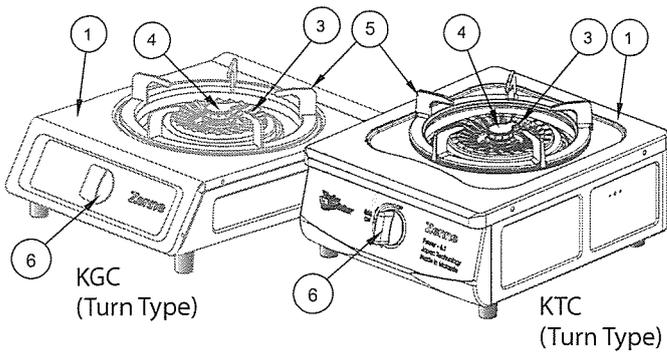

KGC & KTC MODELS (TURN TYPE)		
Without Safety Sensor		With Safety Sensor
• KGC11A	• KTC18S	• KGC16A • KGC16C
• KGC11C	• KTC28S	
• KGC12A	• SS19	
• KGC12C		

Part Name


- 1. Top
- 2. Glass Top

- 3. Burner Cap
- 4. Small Burner Cap

- 5. Trivet
- 6. Knob

PLACEMENT OF PARTS

■ Placement of the Burner Caps

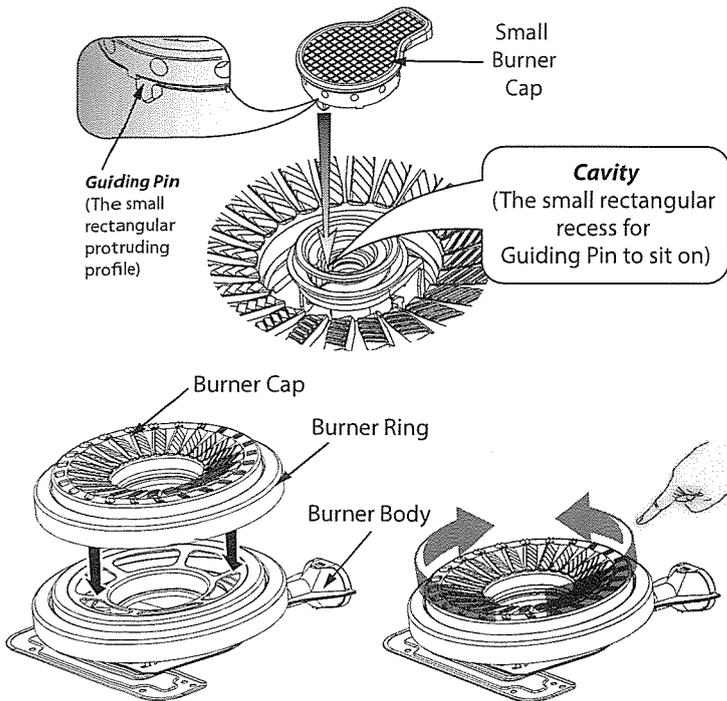

The **CORRECT** way of positioning a **Small Burner Cap**.

Gap created due to tilting of cap.

✓ **CORRECT** ✗ **TILTED** ✗ **DISENGAGED**

If the Small Burner Cap is placed in a *tilted* or *disengaged* position during use, abnormal burning may occur.

** A cap is normally defined as a lid or cover. Therefore, the burner cap functions as a cover for the burner body.*

When placing the burner cap, ensure that it is positioned correctly and not positioned at a tilted or disengaged position.

The rotational movement of burner cap ensures that the burner cap is sitting properly on the burner body.


■ Safety Sensor (Only applicable for models equipped with this device)

This flame failure safety device reacts to the temperature of the flame, as it detects the heat from the flame generated.


When the flame is extinguished, the flame failure safety device cuts off the gas supply automatically within a minute. Remember to turn the knob back to "OFF" position.

If you wish to re-ignite the gas cooker, please make sure :

1. Clean up spillage on the flame failure safety device and burner caps.
2. The burner caps are properly placed.

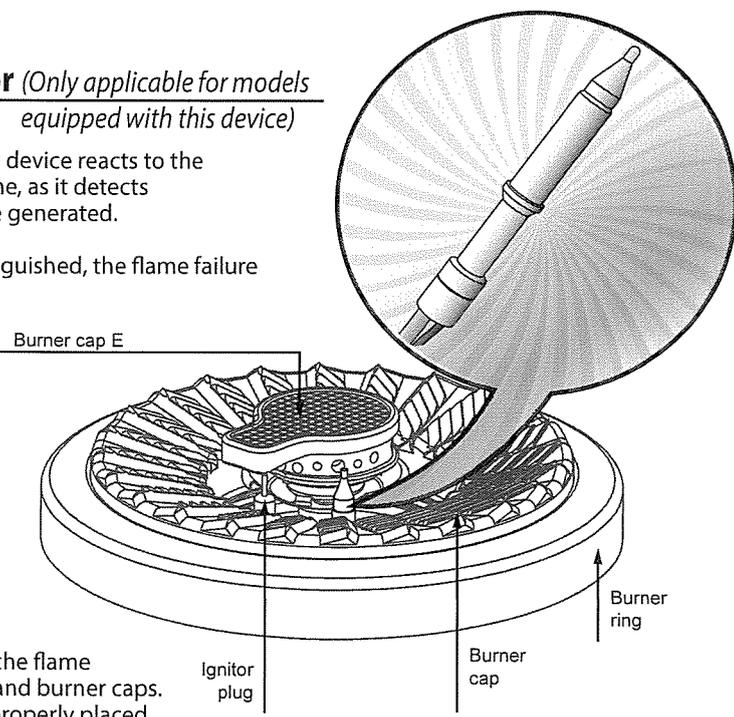


Example Conditions of Flame Extinguished

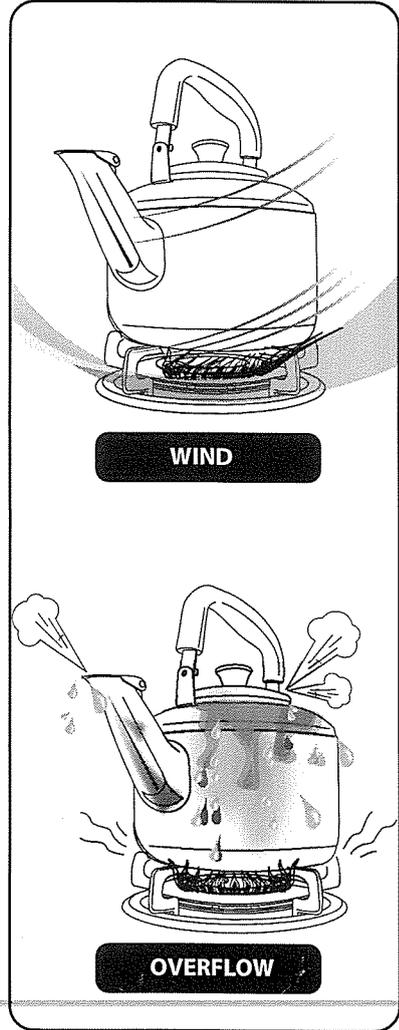


OPERATING THE IGNITION (TURN TYPE)

1. TURNING ON THE GAS COOKER

- Gas cookers without SAFETY SENSOR:
 - Push in the ignition knob fully.
 - Turn anti-clockwise towards the [ON] position.

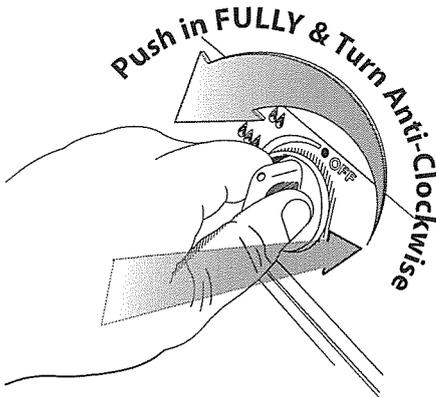






- Gas cookers with SAFETY SENSOR:
 - Push and turn anti-clockwise towards the [ON] position. (hold down for 5 seconds)

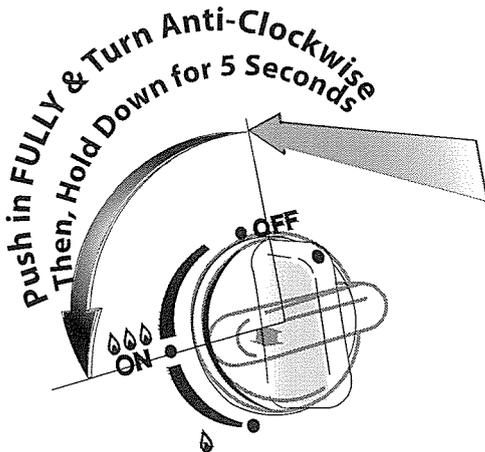

- Release the knob and check if the flame has been ignited. If no flame is detected, turn the knob to [OFF] position and repeat the above steps.
- When the burner has been ignited, adjust the knob to achieve the desired flame intensity.

Note:
It will take longer time for ignition if the gas cooker has not been used for a long period of time.

2. CONTROLLING THE FLAME

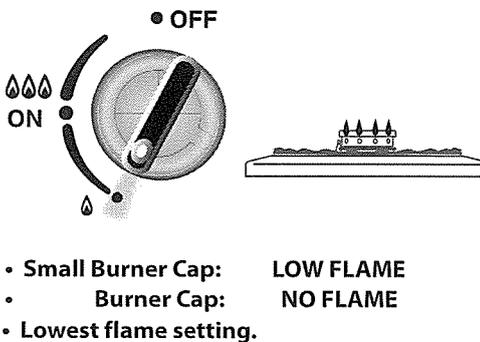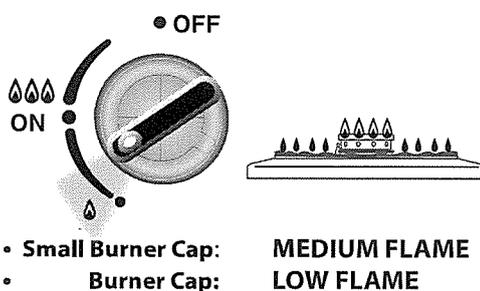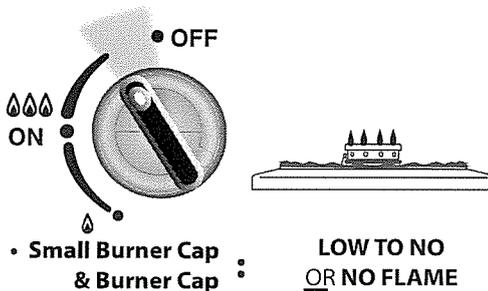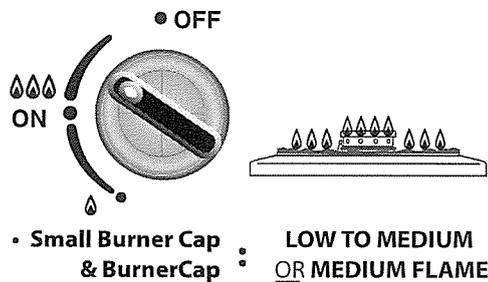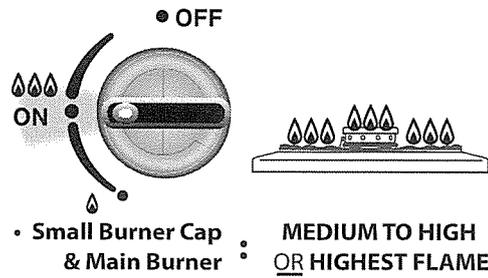


CAUTION :



Flame intensity will not accurately match illustrations on the flame indicator.

3. TURNING OFF THE GAS COOKER

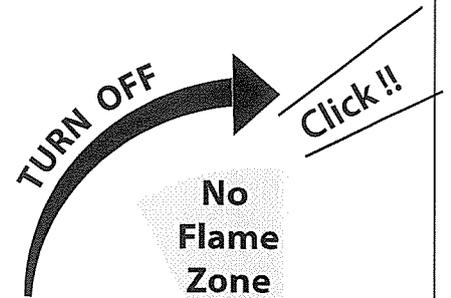


- Turn the ignition knob clockwise towards the [OFF] position. You will then hear a 'CLICK' sound. This is a signal that the gas cooker has been correctly turned off.


NOTE :

Sometimes, a "POP" sound can be heard when the burner is turned off. This is normal.

LEGEND :

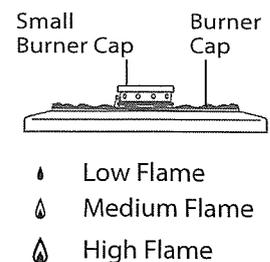

■ Auxiliary Trivet (Usage & Caution)

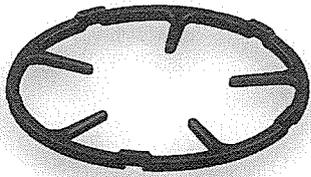


USAGE:

The auxiliary trivet is used when the base of the pan or wok size utilised during cooking is too small to be supported by the main trivet. Hence, this optional part is used to provide extra support.


CAUTION :

USE :

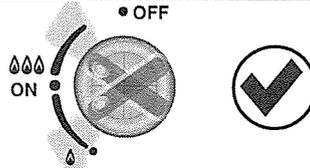

- Burner Cap: **LOW** Flame
- Small Burner Cap: **STANDARD** Flame

DO NOT USE :

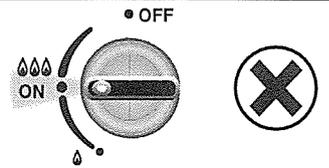

- Burner Cap: **Highest** Flame
- Small Burner Cap: **Highest** Flame

Should the auxiliary iron trivet be used during cooking, please **DO NOT** turn the knob to the maximum flame. The intense heat from the flame may soften and burn the trivet until its surface turns red hot.

CLEANING & MAINTENANCE

■ Top




Note:
Wear safety gloves when cleaning and carrying out maintenance to avoid injury.

DO NOT USE:

- PVC / Metal Brush
- Alkaline detergent / Petrol / Corrosive or Bleaching Material

- Use a soft cloth or soft sponge with mild or neutral detergents to wipe the top plate.
- **DO NOT** use a PVC or metal brush to clean it.
- **DO NOT** use alkaline detergent, petrol, corrosive or bleaching material. These cleaning materials may permanently damage the surface finishing (non-stick coating and stainless steel material).

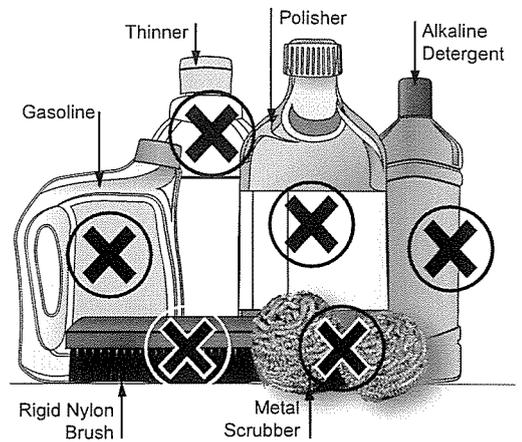


- **DO NOT** place metal sheets, wire gauze or aluminium plates on top of the burner for cooking purposes as this will cause irremovable stains on the top plate.


■ Glass Top (for GST211)

When cleaning tempered glass top, wipe it with a soft, damp cloth and mild detergent.

DO NOT use metallic sponge, sharp chisel or scraper to clean the glass surface when removing sticky food residue.

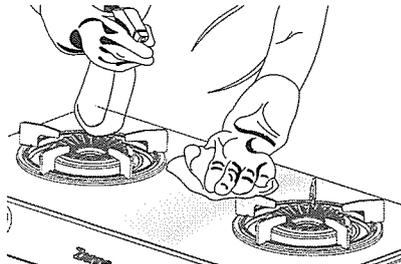

■ Trivet

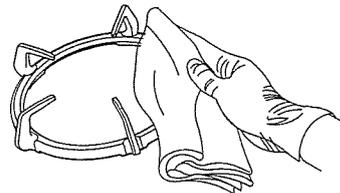

Wipe and clean the trivet regularly.



TIPS:

If the gas cooker will not be used for some time, keep the burner clean and cover the gas inlet to prevent build-up of dust or spider webs etc.. This may lead to ignition problems when you try to use at a later time.


■ Flame Failure Device

If the tip of the sensor is covered up with food residue caused by burnt overflow, porridge and so on, please **DO NOT** use rough metal scour or scraper to clean it as this may dent and spoil the sensitivity of the sensor's tip.

Turn the ignition knob back to 'OFF' position (Step 1), and **DO NOT** attempt to reignite the gas cooker. Use only soft brush, sponge or soft cloth with warm water and dishwashing detergent (Step 2). **Wipe off** the dirt or food residue covering the tip of the sensor prior to igniting the gas cooker again (Step 3).

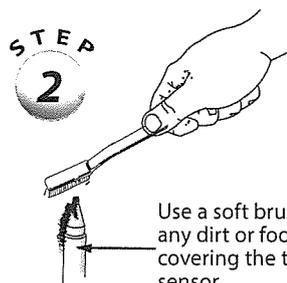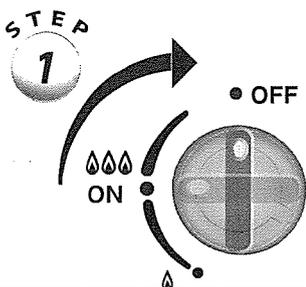


Use a soft brush to remove any dirt or food residue covering the tip of the sensor.

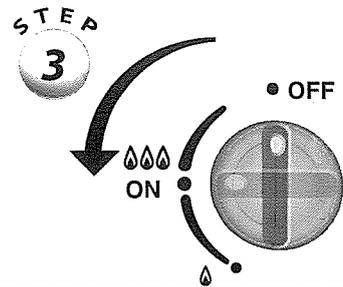

CLEANING & MAINTENANCE

■ Burner Body & Burner Cap


- Type A:

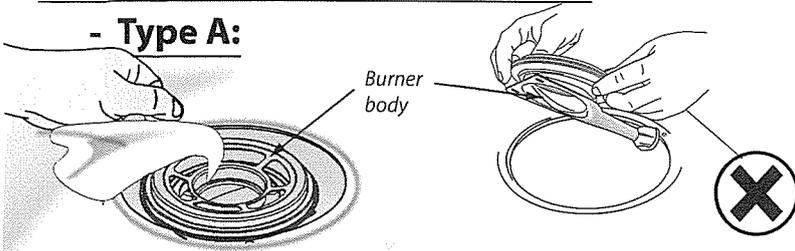


- Use a soft cloth or soft sponge to clean the burner body. As dirt or oxidised material may be difficult to remove, using a softer brush may produce better results.

DO NOT REMOVE the burner body from the unit.

- Type B: (Model: KLS216V)

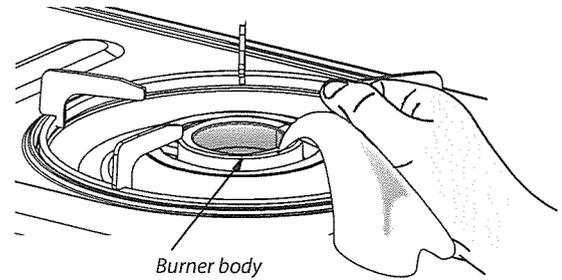


Burner body

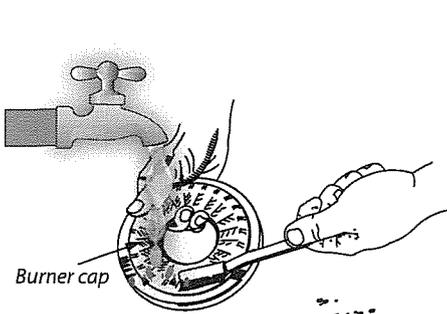


Burner cap


Recommended to clean with a soft brush under running water.

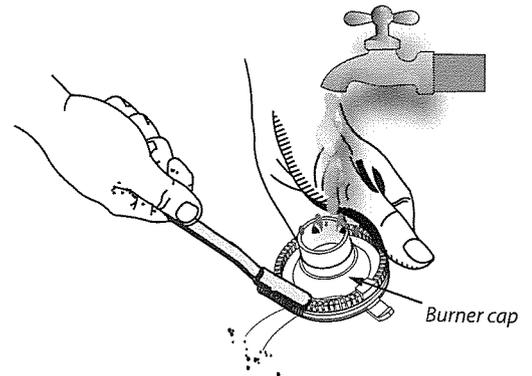


Burner cap

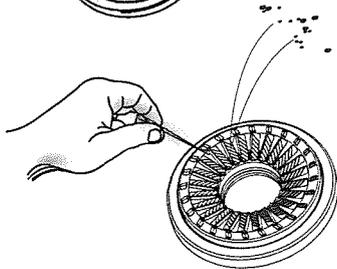

If the flame becomes uneven, clean the slits of the burner, which may be clogged with dirt, by using a needle. **Do not attempt to widen the slits of the burner cap.** Doing so may cause irregular combustion and explosive sound.

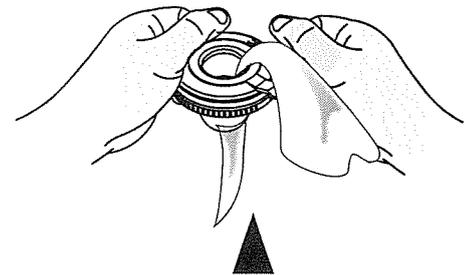

After washing the burner cap, ensure that it is dried before re-ignite the gas cooker.

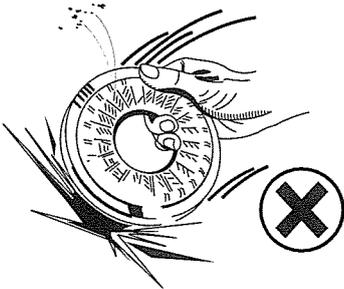

Do not knock or bump it against hard surfaces in an attempt to remove dirt. The burner cap may become dented or damaged.

TROUBLESHOOTING

PROBLEMS & OBSERVATIONS	POSSIBLE CAUSES	SOLUTIONS
<p>1. Difficult to ignite or flame is easily cut off</p>	<ul style="list-style-type: none"> i. The ignition knob is either not pressed downward properly. ii. Main gas valve is not turned on. iii. It takes longer time to ignite especially in the morning. Air may be trapped in the gas hose. iv. Air is trapped in the gas hose when the gas tank is either empty or almost empty. v. Safety sensor/ ignition pin/ burner is dirty. vi. Control valve is blocked by a build-up of impurities originating from inside the gas cylinder. vii. Safety sensor may be incorrectly assembled or positioned. 	<ul style="list-style-type: none"> i. Turn the knob to the "OFF" position. Press down the knob fully and turn it anti-clockwise slowly. Hold it down for few seconds until the flame is ignited. ii. Turn on the gas valve. iii. Turn the knob on and off a few times to remove the trapped air. iv. Replace the gas tank. v. Remove the dirt and clean these parts thoroughly. vi. Send the gas cooker to the nearest authorised Zenne dealer for servicing. (Replace the old control valve in case of any sludge build-up) vii. Contact our service team to reposition the safety sensor.
<p>2. i. Unstable flame</p> <p>ii. Yellow flame</p> <p>iii. Flame cut off during operation</p> <p>iv. Abnormal and extra sounds</p> <p>v. The flames become yellowish due to the calcium contents in the vapourised water.</p>	<ul style="list-style-type: none"> i. Safety sensor / ignition pin / burner is dirty. ii. The gas tank is empty or almost empty. iii. Slits of the burner cap are clogged. iv. The burner cap is not capped properly. v. Humidifier is being used in or near the cooking area in the same room. 	<ul style="list-style-type: none"> i. Remove the dirt and clean these parts thoroughly. ii. Replace the gas tank. iii. Clean the cap with i.e. a soft brush. iv. Ensure that the burner cap is correctly placed back in position. v. Switch off the humidifier.
<p>3. i. Detection of gas odour</p>	<ul style="list-style-type: none"> i. Gas hose is not properly connected. ii. Cracks or pin holes on the hose. 	<ul style="list-style-type: none"> i. Check and ensure that the hose is properly installed. ii. Replace the damaged hose with a new hose.

PRODUCT SPECIFICATION

MODELS	KGS101B & KGS101C		KGS201C & KGS209VS		KGS204A & KGS205S		KGS208C		KGS208M	
Product Type	Turn Type									
Product Dimensions WxHxD (mm)	700 X 138 X 426		700 X 148 X 426		600 X 138 X 420		700 X 148 X 426			
Product Weight (kg)	3.8		4.2		3.7		4.0		4.0	
Gas Type	L.P. Gas	Natural Gas	L.P. Gas	Natural Gas	L.P. Gas	Natural Gas	L.P. Gas	Natural Gas	L.P. Gas	Natural Gas
Gas Consumption, (kW)	Left 3.3		3.6		3.6		3.6		3.6	
	Right 3.3	N/A	3.6	N/A	3.6	N/A	3.7	N/A	3.7	N/A
	Total 6.6		7.2		7.2		7.3		7.3	
Ignition	Piezo Electric									
Gas Inlet	Ø9.5mm Rubber Hose									
Safety Device	N/A									

MODELS	KGS301A & KGS301C		SS309		KGS401A & KGS401C		KGS501C		GST211	
Product Type	Turn Type									
Product Dimensions WxHxD (mm)	700 X 148 X 426								690 X 155 X 420	
Product Weight (kg)	4.3		4.3		4.4		5.5		7.2	
Gas Type	L.P. Gas	Natural Gas	L.P. Gas	Natural Gas	L.P. Gas	Natural Gas	L.P. Gas	Natural Gas	L.P. Gas	Natural Gas
Gas Consumption, (kW)	Left 3.6		3.6		4.5		4.5	4.8	3.2	
	Right 4.5	N/A	4.5	N/A	4.5	N/A	4.5	4.8	3.2	N/A
	Total 8.1		8.1		9.0		9.0	9.6	6.4	
Ignition	Piezo Electric									
Gas Inlet	Ø9.5mm Rubber Hose									
Safety Device	N/A					YES			N/A	

MODELS	KGT301B		KGT301B-SS		KGT401B		KGT501B		KDi106, KDi106C & KDi106D	
Product Type	Turn Type									
Product Dimensions WxHxD (mm)	700 X 157 X 426								700 X 138 X 420	
Product Weight (kg)	5.4		5.4		5.9		6.5		3.8	
Gas Type	L.P. Gas	Natural Gas	L.P. Gas	Natural Gas	L.P. Gas	Natural Gas	L.P. Gas	Natural Gas	L.P. Gas	Natural Gas
Gas Consumption, (kW)	Left 3.6		3.6		4.5		4.5	4.8	2.8	
	Right 4.5	N/A	4.5	N/A	4.5	N/A	4.5	4.8	3.1	N/A
	Total 8.1		8.1		9.0		9.0	9.6	5.9	
Ignition	Piezo Electric									
Gas Inlet	Ø9.5mm Rubber Hose									
Safety Device	N/A					YES			N/A	

MODELS	KDi201C & KDi201D		KTM401S		KTM402S		KTM701S		KLS206V	KLS216V
Product Type	Turn Type									
Product Dimensions WxHxD (mm)	700 X 138 X 420		700 X 180 X 433		700 X 195 X 433		700 X 195 X 433		620 X 119 X 404	
Product Weight (kg)	3.8		7.7		8.7		8.2		3.8	4.6
Gas Type	L.P. Gas	Natural Gas	L.P. Gas	Natural Gas	L.P. Gas	Natural Gas	L.P. Gas	Natural Gas	L.P. Gas	L.P. Gas
Gas Consumption, (kW)	Left 3.1		5.3		6.2		5.3		3.6	2.5
	Right 3.1	N/A	5.3	N/A	6.2	N/A	5.8	N/A	3.6	3.0
	Total 6.2		10.6		12.4		11.1		7.2	5.5
Ignition	Piezo Electric									
Gas Inlet	Ø9.5mm Rubber Hose									
Safety Device	N/A									

MODELS	KGC11A & KGC11C		KGC12A & KGC12C & SS19		KGC16A & KGC16C		KTC18S		KTC28S	
Product Type	Turn Type									
Product Dimensions WxHxD (mm)	300 X 141 X 420		300 X 145 X 420		300 X 142 X 420		320 X 193 X 433		320 X 193 X 433	
Product Weight (kg)	2.1		2.3		2.4		4.5		4.5	
Gas Type	L.P. Gas	Natural Gas	L.P. Gas	Natural Gas	L.P. Gas	Natural Gas	L.P. Gas	Natural Gas	L.P. Gas	Natural Gas
Gas Consumption, (kW)	3.6	N/A	4.5	N/A	4.5	4.8	5.8	N/A	6.2	N/A
Ignition	Piezo Electric									
Gas Inlet	Ø9.5mm Rubber Hose									
Safety Device	N/A				YES			N/A		

PRODUCT SPECIFICATION

(Comply with TUV Standards)

MODELS		KGS 512-S					
Product Type		Turn type					
Product Dimensions (mm)		700x157x426 (Up to Trivet Height)					
WxHxD							
Product Weight (kg)		4.5					
Ignition		Piezo Electric					
Safety Device		Flame Failure Device					
Gas Consumption, kW (kg/h)	Burner Gas Pressure (mbar)	LP Gas			Town Gas		
		30			10		
	Right	4.5			4.4		
	Left	4.5			4.4		
	Total	9.0			8.8		
Nozzle/Injector Size, (Ømm)	Burner Right	Main	Small	Pilot	Main	Small	Pilot
		1.0	0.43	0.55	2.8	1.1	1.2
	Left	1.0	0.43	0.55	2.8	1.1	1.2
Gas Connecting Tube							
LP Gas		Ø9.5mm gas specific rubber hose					
Town Gas		PT ¼ Thread (mate)					
Pan size which are best used on Hob unit (Ømm)							
Burner		Maximum		Minimum		Use of Auxiliary Trivet (Adaptor)	
	Right	280		170		120	
	Left	280		170		120	

INSPECTION AFTER INSTALLATION

CHECKLIST:

(✓/✗)

1.	Type of Gas	i. Does the type of gas comply with the type stated on the sticker pasted at the side of the gas cooker?	
2.	Parts & Installations	i. Are there any missing parts or accessories?	
		ii. Is the installation being carried out according to the required distance?	
		iii. Are the burner caps and trivets placed correctly?	
3.	Gas Connection	i. Is the gas hose connecting the gas cooker and gas supply properly and securely connected?	
		ii. Are there any leaks from the gas hose?	
4.	Distance of Flammable Objects from Gas Cooker	Is the gas cooker installed far from flammable materials?	
5.	Location	Is the gas cooker installed on a secured and levelled platform or surface?	
6.	Ventilation	Is there adequate ventilation in the cooking area for the gas cooker to perform at an optimum level?	



WARRANTY

TERMS AND CONDITIONS OF WARRANTY :

Thank you for purchasing a Zenne product. We warranty the provision of complimentary repairs of Zenne Table Top Cooker for a period of 12 months from the date of purchase subject to the terms and conditions listed below.

1. This warranty only applies to those product(s) purchased directly, for domestic use in Malaysia, from Zenne authorised dealers as are particularised in Zenne's website: <https://www.zenne.com.my/>, where the product is supplied by Zenne Infinity Sdn. Bhd. Zenne does not provide standard warranty for any purchases made from any online platform and or unauthorised dealers.
2. This warranty covers manufacturing defects or failures to normal usage within the specified warranty period. Zenne Infinity Sdn. Bhd. or its authorised service dealers, will at its discretion either repair or replace the defective parts of the product without charge. All replacement parts under this warranty shall become the property of Zenne Infinity Sdn. Bhd.
3. This warranty card is not replaceable if it is lost or misplaced.
4. Faulty Zenne Table Top Cooker can be sent to Zenne Infinity Sdn. Bhd. or its authorised dealers for repair. Consumers will be responsible for any transportation costs associated with any necessary repair services conducted at the consumer's premise.

The conditions not covered under this warranty, are:

- (a) Damage caused by household pests, fires, natural disasters, floods or pollution.
- (b) Any damage or defects incurred by unauthorised repair services, improper installation, unauthorised modification or alteration, misuse, negligence, riot and accident.
- (c) The product is damaged due to commercial usage (Warranty covers the products intended for personal household usage only).
- (d) Defects caused as a result of the consumer failing to follow instructions as stated in the user manual, etc. not performing proper cleaning and maintenance method.
- (e) Damage of external finishing (discolouring after prolong usage), accessories and removable and / or breakable items i.e. battery, knobs, enamelled / chromed stainless steel surface coating or finishing.

Note:

You are required to present the warranty card together with the purchase receipt or refer to its production date for your warranty service. Zenne Infinity Sdn Bhd or its authorized service dealer reserves the rights to decline any warranty claim should one or both documents fail to be presented. If you require any further assistance and/or information, please contact any of our authorized dealers.

